

Listening Safely

To protect your hearing when using the headset, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Wearing a headset while driving a car or riding a bicycle can create a traffic hazard and could be illegal in some areas.

FCC Statement

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio from the receiver
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the radio.

RadioShack
A Division of Tandy Corporation
Fort Worth, TX 76102

11A7

Printed in Hong Kong

OPTIMUS®

AM/FM Headset Radio

n Automatic FM Stereo Circuit

n 35mm Diameter Speakers

n Flexible FM Antenna

n Extended Bass

n Adjustable Headband

STEREO MATE

Owner's Manual

Cat. No. 12-923

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

(continued)

(continued)

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W,

100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

Caring for Your Radio


To enjoy your radio for a long time:

- Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.
- Do not take it apart. If something is wrong with the radio, take it to your local RadioShack store for assistance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INSTALLING A BATTERY

AAA Battery (Cat. No. 23-555)

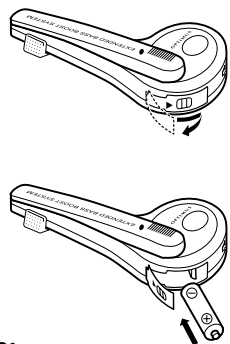

Cautions:

- Match the polarity symbols (+ and -) marked on the printed circuit board inside the battery compartment.
- Always use a fresh battery of the required size.

USING THE HEADSET RADIO

Built-in flexible FM antenna



VOLUME — rotate to adjust the volume (see "Listening Safely")


E-BASS OUT/IN — slide to **IN** for a rich bass sound or to **OUT** for a normal bass sound

OFF/AM/FM ST. — slide to **AM** or **FM ST.** to turn on the radio and select a band, or to **OFF** to turn the radio off

Note: The radio automatically switches from monaural to stereo sound when an FM stereo signal is strong.

TUNING — rotate to select the station you want.

ADJUSTING THE HEADBAND

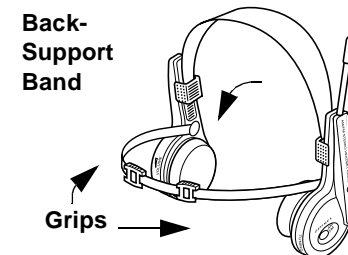

SPECIFICATIONS

AM	530–1710 kHz
FM	88–108 MHz
Output Power	11 mW + 11 mW
Power Source	One AAA Battery, Cat. No. 23-555
Alkaline Battery Life (at 0.5 mW output):	
	75 Hours at AM
	60 Hours at FM/FM Stereo
Weight (with Battery)	4.8 oz (136g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

© 1997 Tandy Corporation.
All Rights Reserved.

RadioShack, Optimus, and Stereo Mate are registered trademarks used by Tandy Corporation.